

IM100 QUICKSTART



Download & install the App



Search for "Illuminati Meter"



Illuminati

Insert two (2) AAA batteries



Open the case



Insert batteries

Start Meter and App




Power on

to power off, press and hold power button for 1.5 sec.



Start App

Connect to iPhone (cont'd)

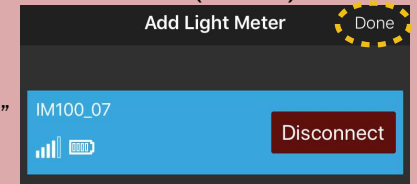


Press "Done"

Create Tiles, iPhone




Click "+"

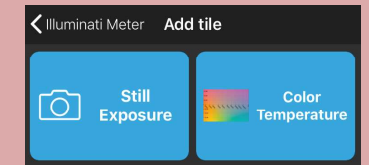

Select Tile type

Create Tiles, iPhone (cont'd)


Select Meter

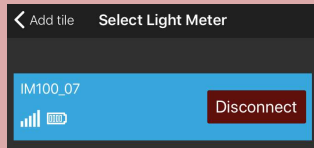

Exposure and Color Temp. Tiles created



Connect to Android

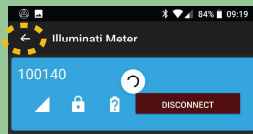


Meter auto-connects and creates Tile
Press left-arrow to view

Connect to Android (cont'd)


First Tile is auto-created

Click on Tile to view settings

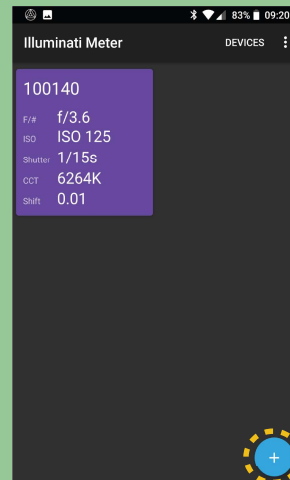


Click "+" to create more Tiles

Click Tile (Android and iPhone) to View Settings

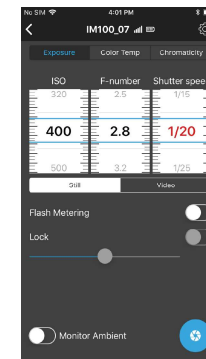

Exposure

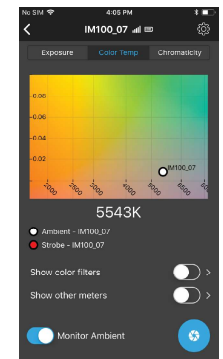

Color Temp

For more product information, please visit our website:

www.illuminatiinstruments.com

Copyright 2018, Illuminati instrument Corp., All rights reserved.